


LED Tilting Downlights

Installation and Operation Manual

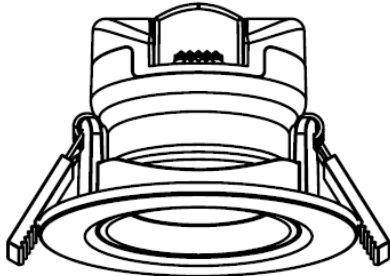


The installation, maintenance and inspection must be carried out by qualified electrician for safety reasons.

Ceiling installation only.

75mm space must be left around the product for ventilation. There should be no cover on the light at any time.

Do not install the product in high temperature and/or humid place.

Storage conditions: room temperature and dry environment.

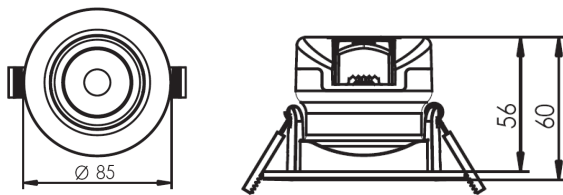

Specifications

Part number	M25TD7/3k	M25TD7/4k	M25TD7D/3k	M25TD7D/4k
	Non Dimmable		Dimmable	
Rated voltage	~220-240V			
Frequency	50/60Hz			
Power Output	7W			
Colour	3000k	4000k	3000k	4000k
Lumens	590lm	650lm	590lm	650lm
IP Rating	IP20			
Beam Angle	36°			
Cut Out	60-65mm			
Working Hours	30000h			
CRI	>80			

Installation

1. Turn off the power.
2. Drill a suitable mounting hole in the ceiling according to the size requirements.
3. Open the line pressing cover with cross screwdriver.
4. Connect the mains cable to the correct terminal. Live = Brown, Neutral = Blue.
5. When correctly connected replace cable cover. Please make sure all screw terminals are tightly fixed.
6. Once connected, pull the springs to the top of the fitting and slide through the hole you have cutout. The springs will automatically close and grip the surface and your light will be fitted. Please note, if the light does not sit flush, please check around the edges for debris, and remove the debris from the surrounding area.
7. Double-check everything is well-connected and turn the power on.

